



Note: Dip Switches are located under the serial interface compartment cover at the printer's top, right-back corner.

#### Power Switch:

Rock the switch backward to turn ON the DMP-136. Rock the switch forward to turn OFF the printer.

#### Paper Selector:

Pull the paper selector forward to select tractor feed paper, or backward for single sheet paper.

#### Control Panel:

One Menu switch and four selection buttons allow the user to custom configure options on the DMP 136. Faxback Document # 4027 will provide specific instructions on using the control panel.

#### Paper Adjustment Knob:

Used to make adjustments to the print start position. Clockwise to advance the paper, counterclockwise to retract the paper.

#### Color Ribbon Adjustment:

Used to adjust the Color Ribbon tracking. If colors run together or the wrong color is printed, this adjustment will correct the print head/color ribbon alignment. Faxback Document # 4029 will provide additional information on color ribbon adjustment.

#### Dip Switches:

##### SW-1

##### IBM MODE

Switch	OFF	ON	
1 Emulation	---	IBM *	
2 Character Set	Set 1 *	Set 2	
3 Slash Zero	NO *	YES	
4 Auto LF	NO *	YES	
5 Auto CR	NO *	YES	
6 Code Page	See table below		
7 Code Page			
8 Code Page			
Country (code)	6	7	8
USA * (437)	OFF	OFF	OFF
Multilingual (850)	ON	OFF	OFF
Portuguese (860)	OFF	ON	OFF
Fr. Canadian(863)	ON	ON	OFF
Norwegian (865)	OFF	OFF	ON
Scandinavian	ON	OFF	ON

##### EPSON MODE

Switch	OFF	ON	
1 Emulation	Epson	---	
2 Character Set	Italic	Graphic	
3 Slash Zero	NO	YES	
4 Auto LF	NO	YES	
5 Skip Over	NO	YES	
6 Country	See table below		
7 Country			
8 Country			
Country	6	7	8
USA	OFF	OFF	OFF
France	ON	OFF	OFF
Germany	OFF	ON	OFF
England	ON	ON	OFF
Denmark I	OFF	OFF	ON
Sweden	ON	OFF	ON
Italy	OFF	ON	ON
Spain	ON	ON	ON

##### SW-2

Switches	OFF	ON
1 Font Selection	See Font Table	
2 Font Selection		
3 Form Length	See Form Length Table	
4 Form Length		

5 Top of Form	1 inch *	9/16 inch
6 Reserved	DO NOT CHANGE	
7 Print Direction	Uni-direction *	Bi-direction
8 Color	Not Installed *	Installed

Font Table	1	2	Form Length Table	3	4
Draft	OFF *	OFF *	11 inches	OFF *	OFF *
Roman	ON	OFF	12 inches	ON	OFF
Sans Serif	OFF	ON	11.66 inches	OFF	ON
Courier	ON	ON	8 inches	ON	ON

Faxback Document # 4025 will give detailed information on setting the DIP switches.

(dtc/tmc-09/06/95)